



Kawasaki KFX 700 INSTALLATION INSTRUCTIONS



PLEASE READ INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

Remove complete stock exhaust while retaining the exhaust gaskets and stock flange nuts. Remove the tool box mounted on the right side of the ATV. Mount the right exhaust pipe to the rear cylinder using the stock gasket and flange nuts (snug at this time). Place the right silencer with the sticker facing outward onto the chamber. (Spray a little W-D40 on the end of the chamber to let it slide on easier). Remove the forward most rear bumper bolt and attach the silencer to this location with the supplied 8 x 30mm bolt, flat, and lock washer. At this time tighten flange nuts and silencer bolt.

When installing the left pipe (the long chamber) route the silencer end of the pipe through the frame next to the left foot peg. Attach to the cylinder with the stock gasket and flange nuts. Mount the chamber bracket to the outside of the stock spacer. Place the remaining silencer onto the left chamber using W-D40 and attach to the rear bumper bolt. Same as you did on the right side. Tighten all the hardware for the left pipe.

Jetting (see Picture on next page)

1. Remove vacuum slides from carbs. Remove stock needles & spacers, note order of assembly.
2. Install LTE needles on groove # 4 counting from the top down.
3. Remove stock main jets and replace with the supplied main jets.
4. Locate the fuel mixture screws. Using a flat blade screwdriver, turn the mixture screws clockwise until seated, then turn out 2.5 turns.

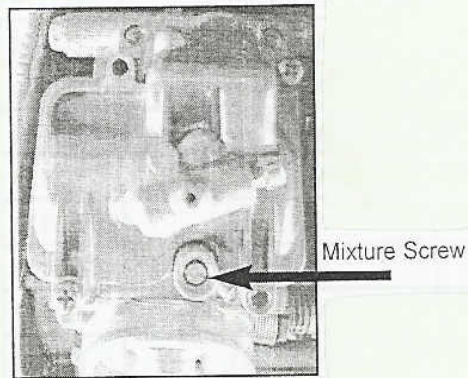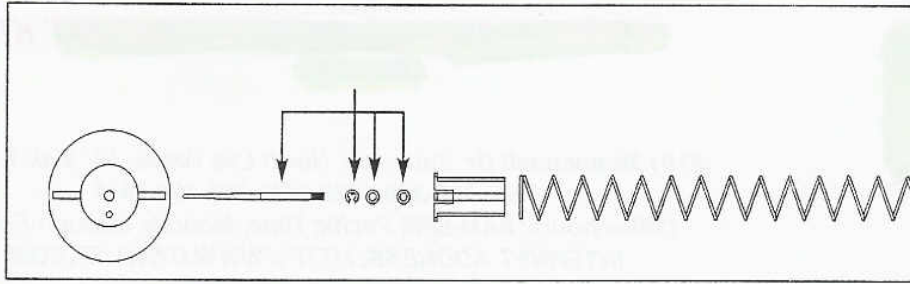

FINISHING UP

Be sure all wires and hoses are zip-tied back so they will not touch the exhaust.

QUIET CORES

Quiet cores are supplied with this kit but not installed. To install the quiet cores remove both rear end caps ((turn downs) and install the quiet cores with the tubes facing inward. Re-install the end caps.

FIRST RIDE

Your first ride after installing exhaust should be no longer than 20 to 30 minutes. Let your ATV cool and re torque all of the hardware on your new exhaust.

Silencer Packing

We recommend checking you're packing every 15 to 20 hours of riding. As your decibel level will increase and without the packing will damage the internals of your silencers. No Warranty will be given for failure from lack of maintaining.

IMPORTANT MESSAGE—PLEASE READ AND UNDERSTAND!
WARRANTY LIMITATIONS

Looney Tuned Exhaust (LTE) warrants only to the original purchaser the equipment purchased is free from defects in material and workmanship under normal use and service. Components of the equipment are supplied to LTE by others and LTE warrants such components to the purchaser only to the extent that such components are warranted to LTE by the supplier. LTE's obligation under this warranty shall be limited to the repair or exchange of any part or parts which may thus prove defective under normal use and service within one year from date of invoice and which LTE examination shall disclose to LTE's satisfaction to be thus defective. This warranty is expressly in lieu of all other warranties expressed or implied and of all other obligations or liabilities on our part and LE neither assumes, nor authorizes any other person to assume for LTE any other liability in connection with the sale of this equipment or any part thereof which has been subject to accident, negligence alteration, abuse or misuse. LTE makes no warranty what so ever in respect to accessories or parts not supplied by LTE. The term "original purchase", as used in this warranty, shall be deemed to mean that person for whom the equipment is originally invoiced. This warrant shall apply only within the boundaries of the continental United States.

The remedy defined in this statement shall be the Purchaser's exclusive remedy against Looney Tuned Exhaust (LTE).

In no case shall Looney Tuned Exhaust (LTE) be liable hereunder for any consequential Damages.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY, WHICH EXTEND BEYOND THE FACE OF THIS STATEMENT.

**Please be sure that no hoses or
wiring will vibrate or lay
against the exhaust before you
take off for your first ride!!!!**

AND

**Don't forget to check your
silencer packing!!!!!!!**